

## ASRockind Technical Reference - Q&A

<b>Question</b>	Is it possible to wake up motherboard regularly at specific time? How do I adjust it?
<b>Release date</b>	2020/5/01
<b>Product</b>	All models
<b>FAQ type</b>	<input type="checkbox"/> Specification <input type="checkbox"/> OS & Driver <input checked="" type="checkbox"/> Application <input type="checkbox"/> BIOS/FW <input type="checkbox"/> Others

### **Answer:**

The BIOS of ASRock industrial motherboard is able to setup the [RTC Alarm Power On].

Please enable [RTC Alarm Power On] under BIOS to set the regular wake up time.

(Path: BIOS > Advanced > ACPI Configuration > RTC Alarm Power On)

After enabling the BIOS option, you can setup the specific time to wake up the M/B.

